


AWDS Automatic Weight Dispensing System



Recommended for hands-free, closed-loop slurry mixing

Touch sensitive graphical interface LCD display screen

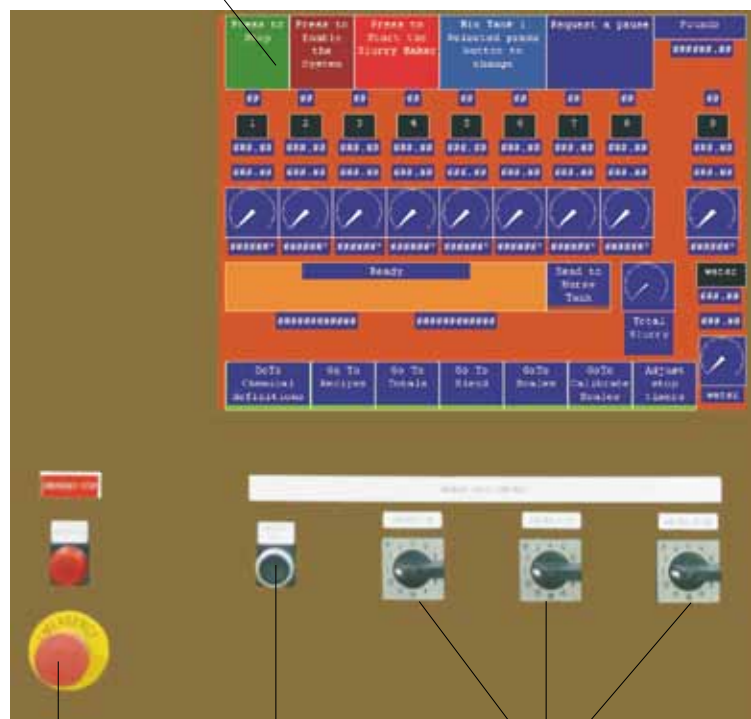

Emergency Stop overrides system

Manual Fill enabler

Manual Valve Controls selection switches



Digital Weight Indicator
Digital display of on-scale weight for reference and State calibration certification.

The AWDS is an automated chemical slurry blending system, which utilizes the specific gravity (weight per volume) of each individual chemical to adjust the delivery of that individual chemical. The operator will select the order in which the chemicals are delivered.


The standard system allows for the mixing of up to ten chemicals (including water) in the PSD and the blending of up to 4 additional chemicals, when the slurry is transferred to the CBP tank. These 4 additional chemicals are generally reserved for colorant, high profile or limited shelf life chemicals.

Delivery of the water is broken into 2 segments. The first segment is delivered prior to the introduction of other chemicals to promote a homogenous blending of the chemical. The final portion of water (10% - 50% as selected by the operator) is added at the completion of the chemical delivery.

The system allows up to 5 automated pauses during the operation for the introduction of dry chemicals. In order to monitor and account for their weight, all dry chemicals will be introduced into the main blend PSD slurry tank.

The System status display on the main screen will keep the operator apprised of ongoing operations or failure indications. After all other chemicals have been introduced, the AWDS adds the rest of the water (10-50% as selected by the operator) to the PSD slurry tank for final blending.

Note: It is normal for the pumps to momentarily turn on and off as the required volume is approached (this allows for the scale to stabilize)

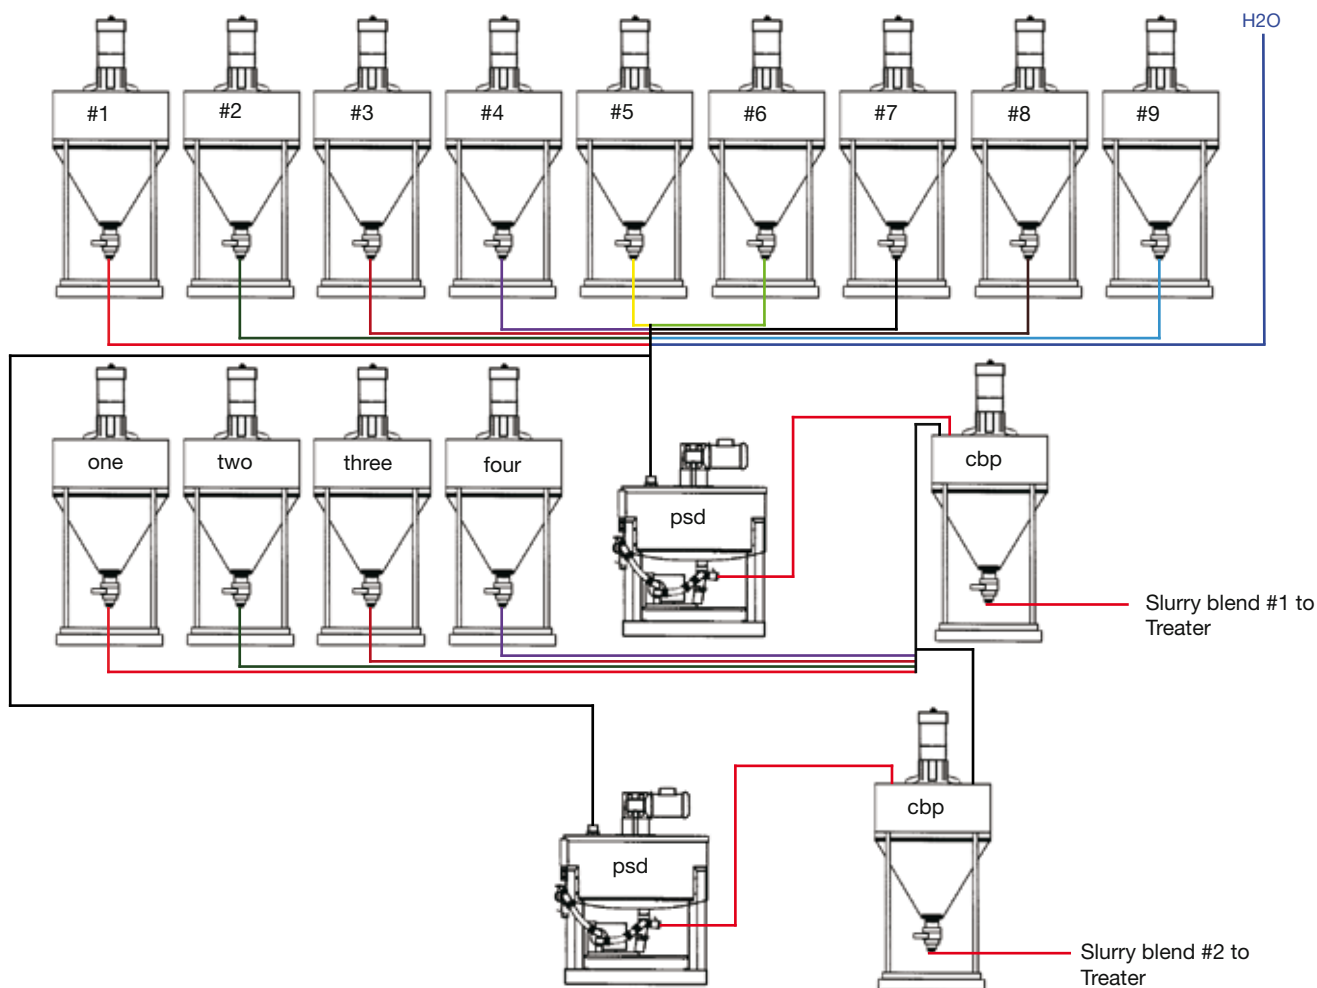

AWDS Mixing & Blending Process

Based on a pre-determined recipe, the AWDS PLC will select up to 9 chemicals from CBP tanks (1-9) plus water to make a slurry mix in the PSD tank. It then sends the slurry mix to the CBP holding work tank. Up to 4 additional chemicals can be added to the CBP holding work tank for blending. The treating system PLC will select the slurry blend from the CBP holding work tank for final application. From one hundred user-defined recipe options, the AWDS can supply the treating system with up to 2 slurry blends.



Bayer CropScience

Bayer CropScience LP
 4895 12th Avenue East
 Shakopee, Minnesota - USA
www.bayercropscience.us
 Phone: +1 952 445 6868
 Toll Free: 1 800 634 6738
 E-mail: equipment@bayer.com

Before using any crop protection product you should read and carefully follow directions, cautionary statements, and other information appearing on the product label. Our technical information is based on extensive testing and is, to the best of our current knowledge, true and accurate but given without warranty as the conditions of use and storage are beyond our control. Descriptions and property data of the product do not contain any statement as to liability for possible damage.

BCSAWDS06282011