

Backlight Kit 80013787 for 100oz Beaker



Recommended for use with Top Mount Calibration Kits on CBP and PSD Tanks



BACKLIGHT KIT

Designed to backlight 100oz Top Mount Calibration Kit Beakers, mounted on CBP and PSD Tanks.

- Helps improve clarity when reading chemical level through heavy viscosity during calibration.

BACKLIGHT MOUNT (14.19" x 2.28")

12" LED STRIP LIGHT

ON/OFF SWITCH

STANDARD 2-PRONG 115V CORD (5FT)




Unlit



Backlit



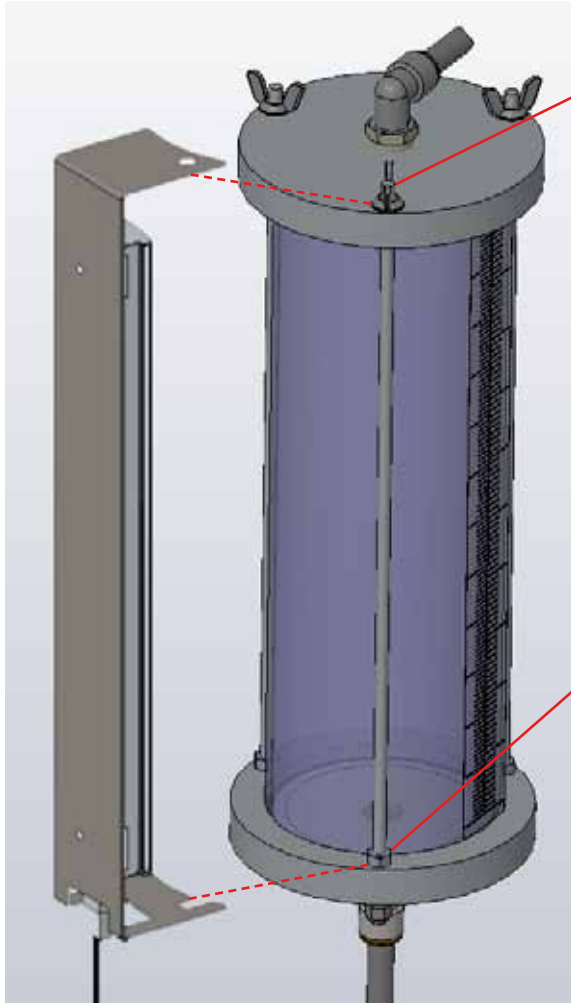

Easy Installation

100oz Closed Calibration Kit

1 Remove existing wing nut, slide bracket over stud, re-tighten wing nut

2 Loosen existing nut, position bracket under nut, re-tighten nut

3 Connect 115V cord plug to external power source.

Value Added Features

- Eye level mounting for easy viewing and operation
- Easy field installation
- Light position accommodates any three existing beaker studs
- 115V power source required

Guide to responsible Seed Treatment

tip

BEFORE APPLICATION	DURING APPLICATION
<p>1 Use only high quality products specially designed and approved for seed treatment</p>	<p>7 Mix products properly according to the label, mix each product well with the water in the tank before adding the next product</p>
<p>2 Keep the products in a locked room that is approved for crop protection products</p>	<p>8 Avoid spillage. Thoroughly clean any spillage to avoid contaminating the environment and waterways</p>
<p>3 Read the label and the directions for use carefully before using the product, especially the safety requirements</p>	<p>9 Rinse the empty containers three times, pour the rinse water into the mixing tank and recycle the containers</p>
<p>4 Protect yourself effectively – use gloves, glasses, mask, overalls, boots – as appropriate and according to each product label</p>	<p>AFTER APPLICATION</p> <p>10 Ensure that access to treated seeds is not possible for children, the public or domestic animals</p>
<p>5 Regularly check, maintain and adjust the seed treatment equipment to ensure accurate application</p>	<p>11 Avoid contamination of your hands when handling treated seeds</p>
<p>6 Treat only well cleaned seed to avoid contamination of yourself and the equipment by contaminated dust</p>	<p>12 Clean the protection equipment. Wash your hands. Take a shower</p>

Bayer CropScience



Bayer CropScience

Bayer CropScience LP
 4895 12th Avenue East
 Shakopee, Minnesota - USA
www.bayercropscience.us
 Phone: +1 952 445 6868
 Toll Free: 1 800 634 6738
 E-mail: equipment@bayer.com

Before using any crop protection product you should read and carefully follow directions, cautionary statements, and other information appearing on the product label. Our technical information is based on extensive testing and is, to the best of our current knowledge, true and accurate but given without warranty as the conditions of use and storage are beyond our control. Descriptions and property data of the product do not contain any statement as to liability for possible damage.

BCSBACKLIGHTKIT11092011